

REPLACING YOUR GLASS CUTTER HEAD

WORKS WITH #653 PISTOL GRIP GLASS CUTTER
& #654 BRASS GLASS CUTTER

1. Locate the mounting screw on top of the cutter head.

2. Using a flat head screwdriver, loosen the screw just enough to allow the cutter head to slide off the rod and spring. Keep the spring attached to the rod.

3. Take your new cutter head and align the top of the cutter head to the notch of the rod.

4. Slide the rod and spring into the new cutter head. The cutter head will want to push back out so keep a good grip on the base of the cutter head.

5. Line up the head screw to the notch on the rod and push the cutter head all the way flush to the body of the cutter.

6. Take your screwdriver and tighten the screw on the cutter head. Let go of the cutter head and see if it has any push back and give in the spring.

- If the cutter head is stuck against the body, loosen the screw a little bit to allow the spring to push the head back and forth.
- If the cutter head pops further than the notch in the rod, push it back against the body and tighten the screw little by little until it has minimal push back.

